

# Beko DNF113 Dishwasher



A standard appliance with choice of programs and options for part loads and delayed starts.

The rotary control can either be operated for each use by selecting a program, pressing Depart/Pause to get it started, and returning to Arret (Off) afterwards, or you can simply leave this set to your preferred program and use the Depart/Pause button to start repeat runs.

Pressing the Depart/Pause button when a program is running will pause the program (for example to add more items), and pressing it again will restart it from where it was. Holding this button down for 3 seconds initiates the cancellation of the program by first draining out the water (green lights flash) and then ending it (Fin light on).

The selectable programs are Eco (economical but slow), Intensif (higher temperature for intensive cleaning), Clean&Shine (normal setting) or Mini (quick wash with warm water).

For part loads, press the Demi Charge button (green light on) before pressing Depart/Pause

For a delayed start, press the Depart Differe button repeatedly until the required time delay is selected (green light flashes) before pressing Depart/Pause (green light now solid) to begin the wait

The vertical row of four operational lights indicate the current status:

Marche (green light) shows the machine is On (select Arret on the rotary control for Off)

Lavage (green light) shows the machine is running the washing cycle

Sechage (green light) shows the machine is running the drying cycle

Fin (red light) shows the program has finished.

The Rincage (rinse aid) and Sel (salt) lights illuminate red when either product needs topping up.